



FITTING INSTRUCTIONS FOR NISSAN PATROL BRUSH RAILS

TUFF BULLBARS AUSTRALIA,
5-7 Holt Drive, (P.O. Box 1977)
Torrington,
Toowoomba,
Queensland 4350,
AUSTRALIA



Ph: **1300 BE TUFF** (1300 23 88 33)
Fax: 07 4633 1236
sales@tuffbullbars.com.au
admin@tuffbullbars.com.au
feedback@tuffbullbars.com.au
www.tuffbullbars.com.au

NISSAN PATROL BRUSH RAILS - BOLT & BRACKET KIT

D/CAB	S/CAB	
8	4	120mm x 12mm threaded rod
4	2	215 x 25 x 5 backing plates
16	8	12mm nuts
16	8	12mm spring washers
18	12	40mm x 10mm bolts
40	28	10mm flat washers
20	14	10mm Nylock Nuts
2	2	Spigot Bolts (10mm bolts)
6	4	Chassis brackets
6	4	Extension Brackets
		Options: Bolt On Spigots Double Rails =12 x 10mm bolts & nuts & washers Single Rails =6 x 10mm bolts & nuts & washers

www.tuffbullbars.com.au

1300 BE TUFF


TUFF BY NAME * TUFF BY NATURE

**AUSTRALIA'S LEADING BULLBAR
MANUFACTURER**





FITTING INSTRUCTIONS FOR NISSAN PATROL BRUSH RAILS

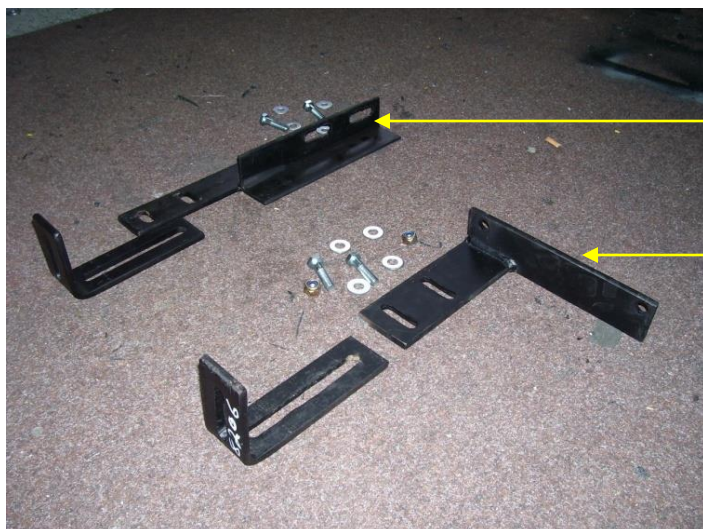

Front Bracket

Rear Bracket



Front bracket –

Bolted to the back side of the gearbox cross mounting bracket



Rear bracket –

Bolts just behind cab mounting bracket – 1300mm from front mud flap

Bolt L-Shaped slotted brackets to chassis brackets

Front one points backwards

Rear one points forwards

Tighten bolts loosely horizontal



FITTING INSTRUCTIONS FOR NISSAN PATROL BRUSH RAILS



Slide brush rail on to spigots



Align rail – step level and up to wheel arch

Use a jack to hold step up

Fit bolts from step to L-Shaped slotted brackets



Make sure step is level and follows the vehicle lines

Tighten and align all brackets

10x40 mm bolts, nuts and washers



FITTING INSTRUCTIONS FOR NISSAN PATROL BRUSH RAILS



Drill an 11 mm hole vertically through the top of the rail and spigot, and insert bolt and tighten to fasten rail to spigot.

Use 10 mm bolts, nuts and washers



PLEASE DON'T HESITATE TO CALL US ON **1300 BE TUFF** (1300 23 88 33) IF YOU HAVE ANY PROBLEMS WITH FITTING

BEST REGARDS, THE TUFF TEAM! 😊